


1421 S. Cooper St, Jackson, MI 49203 Phone: (517) 782-8884 Fax: (517) 782-8906 info@jacksonamf.com www.jacksonamf.com

JAMF Continuous Coping Cleat

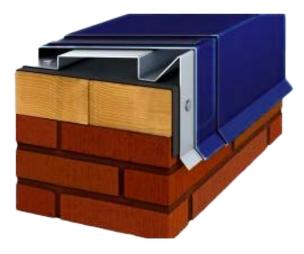

Overview

JAMF Continuous Coping Cleat system is a twopart assembly that includes a front and rear segmented cleat and a decorative snap-on coping cover for single ply commercial roof systems. Our Continuous Coping Cleat is available as prepainted Kynar500® in .040" formed aluminum and 24 gauge galvalume steel. This product features our patent pending 16-gauge (G90) "V" segmented pre-punched cleat spaced at 60" on center, is available in 12" standard cleat lengths and 10' standard coping cover lengths. Concealed splices plates and fasteners are included with the purchase of this product.

Features and Benefits

- Secures roof Membrane to Parapet Wall
- Allows for the use of high-torque screws without penetrating the top surface of the Membrane
- Pre-Punched Segmented Cleat
- ANSI-SPRI ES-1 Certified
- 210 MPH Lifetime Wind Warranty
- 35-Year Gold Standard Paint Warranty
- Corporate and Custom Colors are available

Installation

For complete installation instructions, please refer to JAMF Architectural specifications and details.

REVIEW CURRENT JAMF ARCHITECTURAL SPECIFICATION AND DETAILS FOR SPECIFIC INSTALLATION REQUIREMENTS.

Quality Assurance


JAMF Continuous Coping Cleat system is tested per ANSI/SPRI Test Method RE-3 bi-directional test for wind requirements for Coping and Wall Caps. The Continuous Coping Cleat shall be certified by Drexel Metals to design pressures as indicated in current edition of SPRI's Wind Resistance Standard for Edge Systems used with Low Slope Roofing System. This products meets International Building Code minimum requirement.


Technical Services

Engineering and shop drawings, as well as longform specifications and CAD details, are available from JAMF. Product samples, detail sheets, color chips and color charts are also available for submittal packages. For personal assistance with questions or for full submittals, contact JAMF or your local independent sales representative.

| Specifications | | | |
|----------------|----------|----------------|------------------------|
| Material | Face | Wall Width | Sustained Pressures |
| 24 gauge | up to 6" | <16" max | -180 psf (*) |
| 24 gauge | up to 6" | 16" to 24" max | -130 psf (*) |
| 0.040 AL | up to 6" | <16" max | -200 psf (*) |
| 0.040 AL | up to 6" | 16" to 24" max | -140 psf (*) |

* Design Engineer must apply the Factor of Safety **ADDITIONAL GAUGES - .050 and .063 aluminum and 22 gauge Galvalume are available upon request

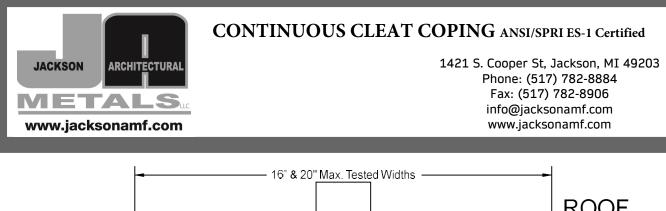

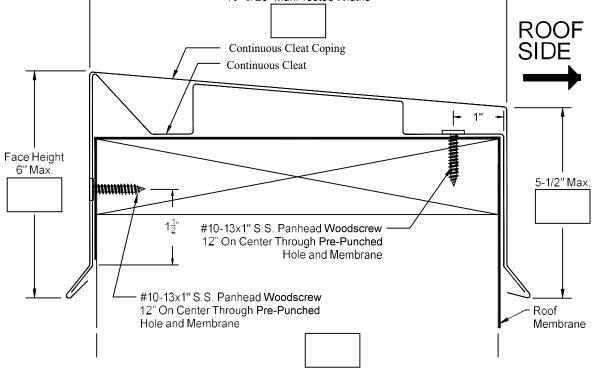

- Continuous Cleat and Fasteners Provided
- Concealed Splice Plates Provided
- Continuous Cleat: 22 GA 20 GA

PRINT APPROVAL:

Architect and/or Contractor shall verify all dimensions, sizes and quantities. All Products to be installed in strict accordance with Jackson Architectural Metals printed instructions.

Approved by:

Date:

Project Name/PO#:

Roofing Contractor:

Representative:

QUANTITIES:

Optional Welded (Surcharge Applies)

Other


(Surch Lineal Feet *: Outside Miters**: Inside Miters**: Right End Caps**: Left End Caps**: Splice Plate Tape Sealant: *Optional lengths available up to 20'-0" ** Standard riveted MATERIAL: 24 GA .040" AL .050" AL Finish:


Firestone

Color:

Carlisle


Other:

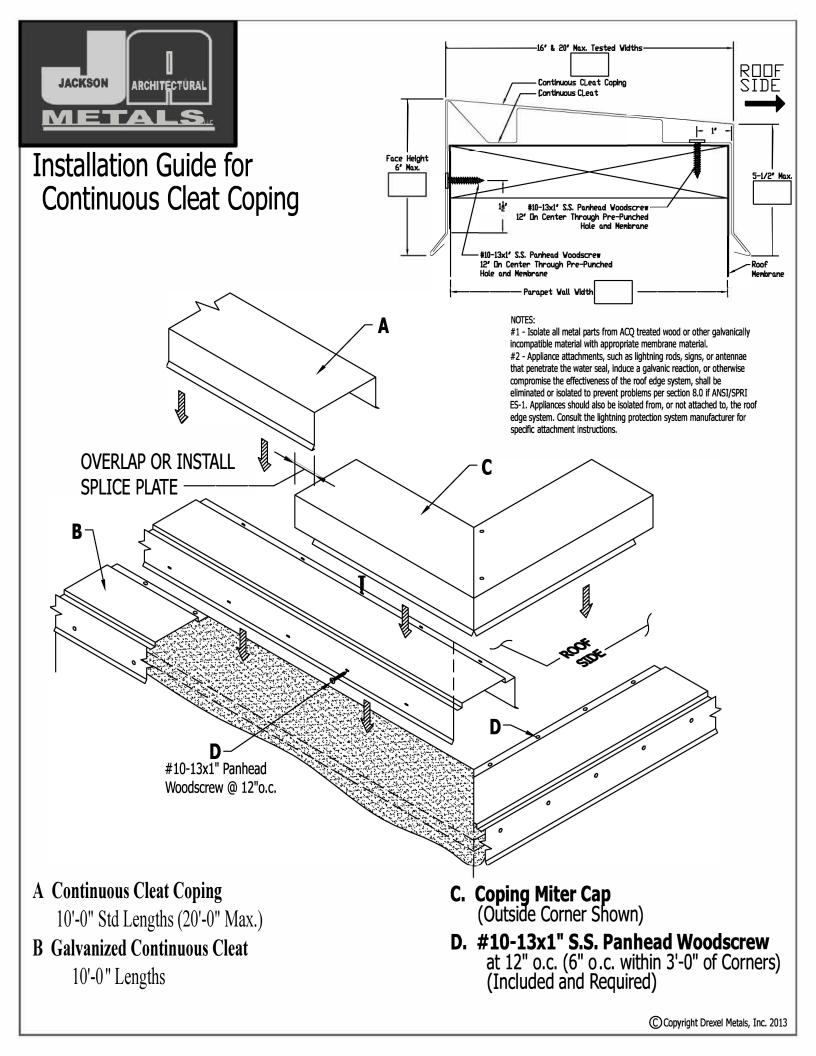

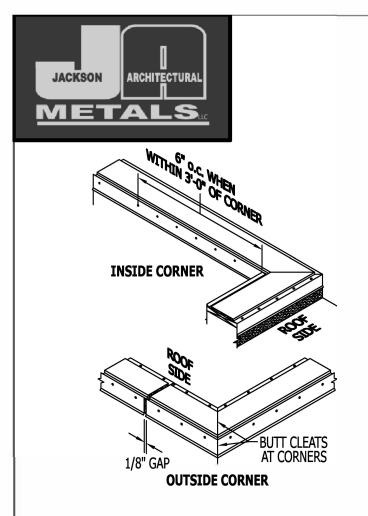


STEP 1: Installing Galvanized Cleat

Prior to installing the cleat, ensure that all metal components have been isolated from ACQ treated lumber with appropriate membrane material. Butt Cleats together at corner conditions. Install Cleat working away from corners. Allow $\frac{1}{8}$ " gap between sections for thermal movement. Attach the Cleat using #10-13x1" S.S. Panhead Woodscrews provided into each pre-punched hole. When within 3'-0" of corners, attach Cleat with screws at 6" on center.

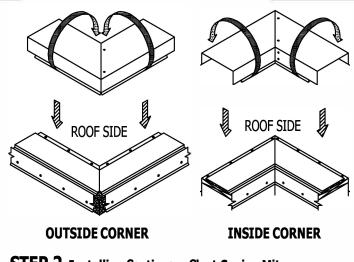

STEP 2: Installing Continuous Cleat Coping Miters

Locate the Miter for the appropriate corner. Notch both sides of the Miter as shown. Hook the drip of the Miter over the kick out of the face side of the Cleat, then rotate the Miter over the top of the parapet and snap onto the roof side of the Cleat.

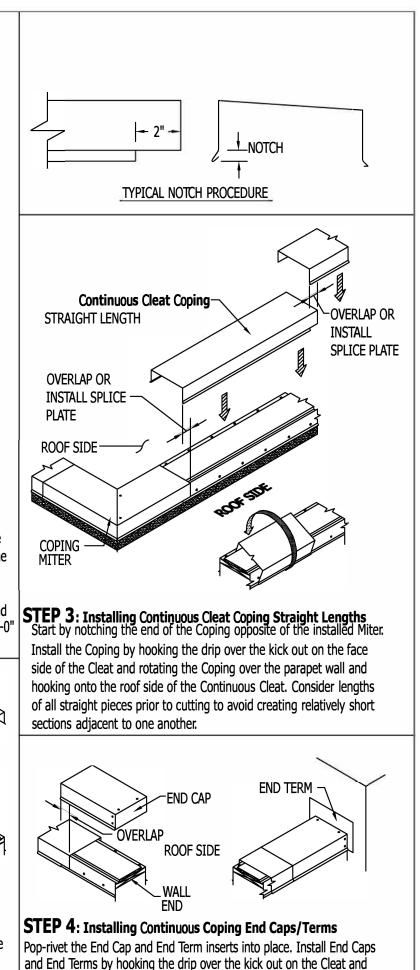

be restrained from moving by securing with a minimum of (2) #10-13x1" S.S. Panhead Woodscrews through the roof side leg.

rotating over the part over the parapet. End Caps and End Terms must